

BOSCH MP7.0 EURO 3

Codici errori

DTC	Descrizione
P0102	Mass Air Flow, Signal Low
P0103	Mass Air Flow, Signal High
P0112	Intake Air Temperature Sensor, Signal Low
P0113	Intake Air Temperature Sensor, Signal High
P0116	Engine Coolant Temperature Sensor, Range
P0117	Engine Coolant Temperature, Signal Low
P0118	Engine Coolant Temperature, Signal High
P0122	Throttle Position Sensor, Signal Low
P0123	Throttle Position Sensor, Signal High
P0130	O2 Sensor 1, Malfunction
P0132	O2 Sensor 1, High Voltage
P0133	O2 Sensor 1, Slow Response
P0134	O2 Sensor 1, Circuit Inactive
P0135	O2 Sensor 1, Heater Malfunction
P0136	O2 Sensor 2, Malfunction
P0137	O2 Sensor 2, Low Voltage
P0138	O2 Sensor 2, High Voltage
P0140	O2 Sensor 2, Circuit Inactive
P0141	O2 Sensor 2, Heater Malfunction
P0171	System Too Lean
P0172	System Too Rich
P0201	Injector Circuit Malfunction, Cylinder 1
P0202	Injector Circuit Malfunction, Cylinder 2
P0203	Injector Circuit Malfunction, Cylinder 3
P0204	Injector Circuit Malfunction, Cylinder 4
P0261	Injector Cylinder 1, Circuit Low
P0262	Injector Cylinder 1, Circuit High
P0264	Injector Cylinder 2, Circuit Low
P0265	Injector Cylinder 2, Circuit High
P0267	Injector Cylinder 3, Circuit Low
P0268	Injector Cylinder 3, Circuit High
P0270	Injector Cylinder 4, Circuit Low
P0271	Injector Cylinder 4, Circuit High
P0300	Random/Multiple Misfire Detected
P0301	Cylinder 1 Misfire Detected
P0302	Cylinder 2 Misfire Detected
P0303	Cylinder 3 Misfire Detected
P0304	Cylinder 4 Misfire Detected
P0327	Knock Sensor, Low Input
P0328	Knock Sensor, High Input
P0335	Crankshaft Position Sensor, Malfunction
P0336	Crankshaft Position Sensor, Range/ Performance
P0340	Camshaft Position Sensor, Malfunction
P0422	Main Catalyst Efficiency, Below Threshold
P0443	EVAP Control, Purge Canister Valve, Malfunction

DTC	Descrizione
P0480	Cooling Fan 1Control Circuit, Malfunction
P0481	Cooling Fan 2Control Circuit, Malfunction
P0500	VSS Sensor, Malfunction
P0503	VSS Sensor, Signal Intermittent
P0506	IDLE Control System, RPM Too Low
P0507	IDLE Control System, RPM Too High
P0560	System Voltage Malfunction
P0562	System Voltage Low
P0563	System Voltage High
P0601	Internal Check FLASH Memory, Check Sum Error
P0603	Internal Check RAM- External, Error
P0604	Internal Check RAM- Internal, Error
P1140	Load Calculation, Range/ Performance
P1386	Knock detection, Test Impulse /Zero Test, Malfunction
P1410	EVAP Control, Purge Canister Valve, Circuit High
P1425	EVAP Control, Purge Canister Valve, Circuit Low
P1426	EVAP Control, Purge Canister Valve, Circuit Interrupt
P1501	Fuel Pump Relay, Circuit Low
P1502	Fuel Pump Relay, Circuit High
P1509	Idle Control Valve Power Stage, Overload
P1513	Idle Control Valve Power Stage, Circuit Low
P1514	Idle Control Valve Power Stage, Circuit Malfunction
P1541	Fuel Pump Relays, Circuit Interrupt
P1570	Immobilizer , Not positive answer
P1602	Permanent Supply Voltage, Circuit Interrupt
P1606	Rough Road Sensor, Malfunction
P1616	Rough Road Sensor, Signal Low
P1617	Rough Road Sensor, Signal High
P1640	EEPROM Write-Read Test, Error
P1689	Fault Memory Functionality Check, Error